

### **User Manual of Product 1:**

DASH Compact Air Fryer Oven Cooker with Temperature Control, Non-stick Fry Basket, Recipe Guide + Auto Shut off Feature, 2 Quart - Aqua

### **User Manual of Product 2:**

DASH Mini Maker for Individual Waffles, Hash Browns, Keto Chaffles with Easy to Clean, Non-Stick Surfaces, 4 Inch, Aqua



*recipes  
inside!*



# DCAF150

# COMPACT AIR FRYER

Instruction Manual | Recipe Guide







# COMPACT **AIR FRYER**

Important Safeguards.....	4-7
Parts & Features.....	8-9
Using Your Compact Air Fryer.....	10-11
Tips & Tricks.....	12
Temperature & Time Chart.....	13
Cleaning & Maintenance.....	14
Troubleshooting.....	16-17
Recipes.....	18-37
Customer Support.....	38
Warranty.....	39

  
*the dash team!*

# IMPORTANT SAFEGUARDS

## IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from the appliance before use.
- Make sure the appliance is cleaned thoroughly before using.
- Never leave the appliance unattended when in use.
- Do not use the appliance for other than its intended use.
- For household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Do not touch hot surfaces. Use handles or knobs.
- Do not fill the Crisper Drawer with oil to avoid a fire hazard.
- During air frying, make sure all ingredients are kept in the Crisper Drawer.
- Do not cover the Air Inlet or the Air Outlet when the appliance is functioning.
- Do not place the appliance directly against a wall or against other appliances. Leave at least 4 inches of free space surrounding the appliance.
- Do not place anything on top of the appliance.
- During hot air frying, hot steam is released through the Air Outlet openings. Keep your hands and face at a safe distance from the steam and from the Air Outlet openings. Be careful of hot steam and air when you remove the Crisper Drawer from the appliance.
- Immediately unplug the appliance if you see dark smoke coming out of it. Wait for the smoke emission to stop before you remove the Crisper Drawer from the appliance.
- The appliance requires approximately 30 minutes to cool down before you can safely handle or clean it.
- This appliance has a built-in timer and will automatically shut off when the Timer has finished. You can manually switch the appliance off by turning the Timer counterclockwise to zero.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Turn the Timer and Temperature Dials to the "OFF" position before disconnecting the power cord from a wall outlet.
- Do not operate this appliance with a damaged cord, damaged plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM-7PM PT Monday-Friday or by email at [support@storebound.com](mailto:support@storebound.com).
- Do not place the appliance on or near a hot gas burner, hot electric burner, or in a heated oven.

## IMPORTANT SAFEGUARDS

- Refrain from using attachments that are not recommended by the appliance manufacturer, as doing so can result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces or hang over the edges of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or personal injury.
- To protect against electrical shock, do not immerse cord, plugs or appliance in water or other liquid.
- Make sure that the voltage indicated on the appliance matches the local mains voltage. Always make sure that the plug is inserted into a grounded wall socket properly.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- The power supply cord is short to reduce risk from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as high as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- To disconnect, turn any control to "off", then remove plug from wall outlet.

**IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.**

## GARANTIES IMPORTANTES

# GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- Lisez toutes les instructions.
- Retirez tous les sacs et emballages de l'appareil avant utilisation.
- Assurez-vous que l'appareil est bien nettoyé avant de l'utiliser.
- Ne laissez jamais l'appareil sans surveillance lorsqu'il est utilisé.
- N'utilisez pas l'appareil à d'autres fins que celles pour lesquelles il a été conçu.
- Pour usage domestique seulement. Ne pas utiliser à l'extérieur.
- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou près des enfants.
- Ne touchez pas les surfaces chaudes. Utilisez les poignées ou les boutons.
- Ne remplissez pas le panier à légumes ou le bac à légumes avec de l'huile car cela présente un risque d'incendie.
- Assurez-vous que tous les ingrédients sont conservés dans le bac à légumes dans le panier à légumes.
- Ne couvrez pas l'entrée d'air ou la sortie d'air lorsque l'appareil fonctionne.
- Ne placez pas l'appareil directement contre un mur ou contre d'autres appareils. Laissez au moins 10 cm d'espace libre autour de l'appareil.
- Ne placez rien sur le dessus de l'appareil.
- Pendant la cuisson à l'air chaud, de la vapeur chaude est libérée par les ouvertures de sortie d'air. Gardez vos mains et votre visage à une distance sécuritaire de la vapeur et des ouvertures de sortie d'air. Faites attention à la vapeur et à l'air chaud lorsque vous retirez le panier à légumes de l'appareil.
- Débranchez immédiatement l'appareil si vous voyez de la fumée noire s'échapper de l'appareil. Attendez que l'émission de fumée s'arrête avant de retirer le panier à légumes de l'appareil.
- L'appareil nécessite environ 30 minutes pour se refroidir avant de le manipuler ou de le nettoyer en toute sécurité.
- Cet appareil dispose d'une minuterie incorporée et s'éteindra automatiquement à la fin de la minuterie. Vous pouvez éteindre manuellement l'appareil en tournant la minuterie dans le sens antihoraire à zéro.
- Faites bien attention lors du déplacement d'un appareil avec de l'huile chaude ou d'autres liquides chauds.
- Tournez le bouton de la minuterie à la position "OFF" avant de débrancher le cordon d'une prise murale.
- Ne faites pas fonctionner cet appareil avec un cordon endommagé ou une fiche endommagée

 
 
 
# GARANTIES IMPORTANTES

après un dysfonctionnement, une chute ou un endommagement de l'appareil. Retournez l'appareil à l'établissement de service autorisé le plus proche pour qu'il soit examiné, réparé ou réglé.

- Pour un entretien autre que le nettoyage, veuillez contacter Storebound directement au 1-800-898-6970 de 7h à 19h du lundi au vendredi ou par courriel à support@storebound.com.
- Ne placez pas l'appareil sur ou près d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car cela pourrait provoquer un incendie, une électrocution ou des blessures.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre sur les bords des tables ou des comptoirs.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances à moins d'être supervisé et instruit par une personne responsable de leur sécurité.
- Assurez-vous toujours de débrancher l'appareil de la prise avant de le déplacer, de le nettoyer, de le ranger et lorsqu'il n'est pas utilisé.
- StoreBound décline toute responsabilité pour les dommages causés par une mauvaise utilisation de l'appareil.
- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures.
- Pour éviter le choc électrique ne plongez pas l'appareil dans l'eau ou d'autres liquides.
- Assurez-vous que la tension indiquée sur l'appareil correspond à la tension secteur locale. Assurez-vous toujours que la fiche est correctement insérée dans une prise murale mise à la terre.
- Cet appareil a une fiche polarisée (une lame est plus large que l'autre). Pour réduire le risque d'électrocution, cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne rentre pas complètement dans la prise, inversez la prise. Si cela ne vous convient toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Un cordon d'alimentation court doit être fourni pour réduire le risque de s'emmêler ou de trébucher sur un cordon plus long. Une rallonge peut être utilisée si des précautions sont prises lors de son utilisation. Si une rallonge est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins égale à la puissance nominale de l'appareil. La rallonge doit être disposée de manière à ne pas tomber sur le comptoir ou la table de travail, où elle pourrait être tirée par des enfants ou trébucher involontairement.
- Pour déconnecter, placez n'importe quelle commande sur "off", puis retirez la fiche de la prise murale.

**GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN**

# PARTS & FEATURES

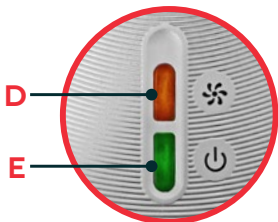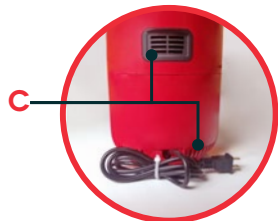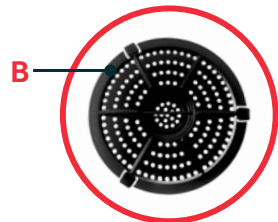

- A** Crisper Drawer
- B** Crisper Tray (Do not remove silicone tabs)
- C** Air Outlet
- D** Heating Light
- E** Power Light
- F** Temperature Control Dial
- G** Air Inlet
- H** Timer Dial
- I** Crisper Drawer Handle

# USING YOUR COMPACT AIR FRYER

## BEFORE USING YOUR AIR FRYER

Remove all packaging materials. Check that the Air Fryer has no visible damage and that no parts are missing. Before using the appliance for the first time or before using it after prolonged storage, wash and dry the appliance and any accompanying accessories. See “Cleaning & Maintenance” for instructions.

If you preheat the appliance before use, food will cook faster. To preheat, select desired temperature (see section “Temperature and Time Chart”) and turn the Timer Dial to 3 minutes; do not put any food in the Crisper Drawer. Wait until the Heating Light goes off (after approximately 3 minutes). Then fill the Crisper Drawer and turn the Timer Dial to the desired preparation time.



- 1** Place the appliance on a stable, flat, heat-resistant surface. Plug the Air Fryer into a wall socket. The Power Light will illuminate.



- 2** Remove the Crisper Drawer from the Air Fryer. Place food in the Crisper Drawer on the Crisper Tray. The Crisper Tray helps circulate air around your food and helps keep excess oil made by your food from pooling around your food. Slide the Crisper Drawer back inside the Air Fryer.



- 3** Refer to the Temperature & Time Chart (pg. 13) to determine the correct settings. Turn the Temperature Control Dial to your desired temperature setting.

 
# USING YOUR COMPACT AIR FRYER



- 4** Turn the Timer to the correct setting. When you set the Timer, the Air Fryer will automatically turn on. The Heating Light will automatically turn on. The Timer will begin to count down from the set time. The Heating Light will blink during the air frying process. This is normal and indicates that the heating element is controlling the temperature.



- 5** For even results, some foods require shaking halfway through the preparation time. See the Temperature & Time Chart for recommendations. Remove the Crisper Drawer from the appliance and shake it gently from side to side. Slide the Crisper Drawer back into the Air Fryer.

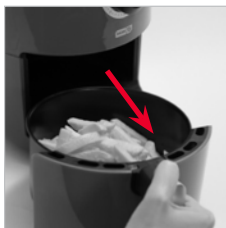

- 6** When you hear the Timer ring, the preparation time has elapsed. Pull the Crisper Drawer out of the appliance and place it on a heat-resistant surface. Check if the food is done. If the food is not ready, simply slide the Crisper Drawer back into the appliance and set the Timer for a few extra minutes.



- 7** To remove items from the Crisper Drawer use tongs. Don't turn over the Crisper Drawer to prevent any oil that has collected on the bottom of the Crisper Drawer from being spilled onto the food. Excess oil from any foods will be collected at the bottom of the Crisper Drawer. Allow the appliance to cool before disposing of any excess oil.

## TIPS & TRICKS

- Air frying smaller items or fewer items will require a slightly shorter cooking time than larger items or more items.
- Shaking smaller items halfway during the preparation time optimizes the end result and can help prevent unevenly fried foods.
- Soak fresh potatoes in water for 30 minutes, then add a small amount of oil for a crispier result. Fry your potatoes in the air fryer within a few minutes of adding the oil.
- Do not prepare extremely greasy items, such as sausages, in the Air Fryer.
- Snacks like chicken nuggets and mozzarella sticks, that can be prepared in an oven can also be prepared in the Air Fryer.
- Use store-bought dough to prepare filled snacks like calzones quickly and easily. Items made with store-bought dough will require a shorter preparation time than homemade dough.
- Use a baking pan in the Crisper Drawer if you want to bake a cake or quiche or if you want to fry fragile or filled items.
- You can also use the Air Fryer to reheat foods. To reheat food, set the temperature to 300°F for up to 10 minutes.
- Do not remove the silicone tabs.

# TEMPERATURE & TIME CHART

Please keep in mind that these temperatures and times are merely guidelines. Actual cooking times may vary depending on the size, shape, and amount of food. When air frying a new item always make sure that your food is cooked properly before consumption. According to the USDA, the safe internal temperature for poultry is 165°F and for beef is 160°F.

SETTINGS CHART			
FOODS	COOKING TIME (MINUTES)	COOKING TEMPERATURE	SHAKE?
Thin Frozen Fries	9-16	400°F	Shake
Thick Frozen Fries	11-20	400°F	Shake
Homemade Fries	10-16	400°F	Shake
Homemade Potato Wedges	18-22	350°F	Shake
Steak	8-12	350°F	
Pork Chops	10-14	350°F	
Hamburger	7-14	350°F	
Chicken Breast	10-15	350°F	
Drumsticks	18-22	350°F	
Chicken Nuggets	8-12	400°F	Shake

\*For even results, some foods require shaking halfway through the preparation time. See the chart below for recommendations.

# CLEANING & MAINTENANCE

- Remove the plug from the wall socket and let the appliance cool down completely.
- Remove the Crisper Drawer to allow the Air Fryer cool down quicker.
- Clean the appliance after every use.
- Do not clean the Crisper Drawer, or the inside of the appliance with metal kitchen utensils or abrasive cleaning materials as this may damage the non-stick coating.
- Wipe the outside of the appliance with a moist cloth.
- The Crisper Drawer and Crisper Tray are dishwasher safe.
- The Crisper Tray removes from the Crisper Drawer to allow for easier cleaning.
- Alternatively you can clean the Crisper Drawer with hot water, dish soap, and a non-abrasive sponge.
- **TIP:** If the Crisper Drawer or Crisper Tray is dirty, fill the Crisper Drawer with hot water and dish soap, place the Crisper Tray in the Crisper Drawer and let it soak for about 10 minutes.
- Clean the inside of the appliance with hot water and a non-abrasive sponge.
- Clean the heating element with a cleaning brush to remove any food residue.
- **NOTE:** Make sure the appliance has cooled down completely before cleaning the heating element.
- Make sure that the appliance is unplugged and all parts are clean and dry before storage.
- Do not remove silicone tabs on the prongs of your Air Fryer Crisper Tray.



# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTIONS
The Air Fryer does not work.	The appliance is not plugged in.	Plug the mains plug into a grounded wall socket.
	You have not set the Timer.	Turn the Timer Dial to the required preparation time to switch the appliance on.
The food is not done after the recommended time is elapsed.	Too much food has been added to the Crisper Drawer.	Use less food and cook in batches if necessary. Your food will also cook more evenly.
	The temperature was set too low.	Turn the Temperature Dial to the required temperature setting (see section "Settings"). Preheat for 5-10 minutes.
Food is fried unevenly in the Air Fryer.	Certain types of food need to be shaken halfway through the preparation time.	Items that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time (see section "Settings").
Snacks are not crispy when they come out of the Air Fryer.	The food was not dry enough or needs a bit of oil.	Make sure to properly dry the food or lightly brush some oil onto the snacks for a crispier result.
I cannot slide the Crisper Drawer into the appliance properly.	There is too much food in the Crisper Drawer.	Do not fill the Crisper Drawer beyond the MAX line.
White smoke is coming out of the appliance.	Your food is too greasy.	When you fry greasy items in the Air Fryer, a large amount of fat will leak into the Crisper Drawer, the fat produces white smoke and the Crisper Drawer may heat up more than usual. This does not affect the appliance or the end result.

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
	The Crisper Drawer still contains residue from previous use.	White smoke is caused by grease heating up in the Crisper Drawer. Make sure you clean the Crisper Drawer properly after each use.
Fresh fries are fried unevenly in the Air Fryer.	Certain types of food need to be shaken halfway through the preparation time.	Items that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time (see section "Settings").
Fresh fries are not crispy when they come out of the Air Fryer.	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.



# COMPACT AIR FRYER RECIPE GUIDE



Follow us **@unprocessyourfood**  
for recipes, videos, & daily inspiration



# 5 SPICE MEATBALLS

## *Ingredients:*

1 lb ground pork  
1 tsp kosher salt  
2 tbsp unsalted, plain breadcrumbs  
1 tbsp Chinese 5 spice powder  
1 large egg  
½ tsp sesame oil  
parsley and sesame seeds to garnish

## *Directions:* (Temperature: 400°F Time: 10 minutes)

Combine pork, salt, breadcrumbs, 5 spice powder, sesame oil and egg in large bowl.

Mix together by hand until well combined.

Use hands or scoop to form 1.5" balls and place 4 balls at a time into Air Fryer in one layer.

Fry for 10 minutes.

Sprinkle parsley and sesame seeds.





# CRAB CAKES

## *Ingredients:*

8 oz lump crab meat, cooked  
½ cup unsalted, plain bread crumbs  
2 eggs  
1 tsp kosher salt  
¼ tsp garlic powder  
¼ tsp onion powder  
½ tsp Cajun seasoning  
1 tsp dill, minced

1 tsp parsley, minced  
*Spicy Mayo*  
1 tbsp Sriracha  
3 tbsp mayonnaise

## *Directions:* (Temperature: 400°F Time: 10 minutes)

Combine crab meat, bread crumbs, eggs, salt, garlic powder, onion powder, Cajun seasoning, dill and parsley in bowl and mix thoroughly.

Form into 2" balls and flatten into round discs.

Place 2-3 patties in Air Fryer in one layer and fry for 10 minutes.

Combine Sriracha and mayonnaise and stir to combine. Serve crab cakes with spicy Sriracha mayo and lemon wedges, if desired.



# PORK & SHIITAKE DUMPLINGS

## *Ingredients:*

1 lb ground pork	1 tsp sesame oil
3 tbsp soy sauce	25-30 wonton wrappers, cut into large circles
½ cup garlic chive, sliced thinly	cold water
½ cup shiitake mushroom, minced	1 tbsp vegetable oil
1 egg, beaten	
½ tsp ginger, minced	
¼ tsp ground white pepper	

## *Directions:* (Temperature: 400°F Time: 10 minutes)

Combine ground pork, soy sauce, garlic chive, shiitake, egg, ginger, white pepper, sesame oil in large bowl and mix by hand thoroughly to combine. Place wonton wrapper on flat surface and add 2 tsp pork mixture to center.

Wet all edges of wonton wrapper and fold in half to form a half moon shape. If desired, overlap edges along the outer edge of wrapper to form a layered effect. Brush with vegetable oil. Place dumplings, 5 at a time, standing upright, to Air Fryer. Fry at 400°F for 10 minutes. Do not overlap the dumplings.

### **Pro Tip:**

For more even browning, turn dumplings 180 degrees halfway through the frying process.





# SRIRACHA CHICKEN WINGS

## *Ingredients:*

4 complete chicken wings, split into flats and drumsticks

½ cup sriracha

½ cup all-purpose flour

1 cup unsalted, plain breadcrumbs

## *Directions:* (Temperature: 400°F Time: 25-30 minutes)

Place chicken wings on paper towels and pat to dry thoroughly.  
Dredge chicken wings in all-purpose flour and shake off excess.

Dip chicken wings in sriracha, then breadcrumbs to cover thoroughly.

Place only flats or only drumsticks in Air Fryer and fry 25 minutes for flats  
and 30 minutes for drumsticks.



# AIR FRYER BURGER

## *Ingredients:*

- 1 lb ground beef, 90% lean
- 1 egg, beaten
- ¼ cup panko breadcrumbs
- ½ tsp garlic powder
- ½ tsp onion powder
- ½ tsp smoked paprika
- ½ tsp ground black pepper
- 2 tsp kosher salt
- ½ tsp worcestershire sauce
- ¼ tsp cayenne pepper (optional)

## *Directions:*(Temperature: 375°F Time: 10 minutes)

Combine all ingredients for the burgers in one large bowl and mix by hand until thoroughly combined.

Form into 4-5" patties and place 1 patty at a time, into Air Fryer.

Air fry at 375°F for 10 minutes or until desired doneness. Serve with desired burger bun and accompaniments.



# AIR FRYER RAVIOLIS

## *Ingredients:*

- 1 jar marinara sauce, store bought
- 1 box cheese ravioli, store-bought or meat ravioli
- 2 cups Italian-style bread crumbs
- 1 cup buttermilk
- ¼ cup Parmesan cheese

## *Directions:* (Temperature: 200°F Time: 5 minutes)

Dip each ravioli in buttermilk, then roll each ravioli into the crumb mixture.

Place the breaded ravioli into your Air Fryer and cook for about 5 minutes, or until crispy.

Serve warm with marinara sauce for dipping.



# CAJUN FRIED CHICKEN THIGHS

## *Ingredients:*

6 chicken thighs, boneless, skinless  
2 tsp kosher salt  
1 tbsp unsalted Cajun seasoning  
1 cup all-purpose flour  
2 eggs, beaten  
2 cups unsalted, plain breadcrumbs

## *Directions:* (Temperature: 400°F Time: 10 minutes)

Toss chicken thighs with salt and Cajun seasoning until well covered. Dredge thighs into flour and shake off excess. Dip thighs in egg mix, then breadcrumbs to cover thoroughly.

Place thighs 2 at a time into the Air Fryer and air fry for 20-25 minutes, or until the internal temperature of the thighs reaches 178°F, and juices run clear. Serve with maple syrup, if desired.



# SESAME ‘CHICKEN’ STYLE TOFU

## *Ingredients:*

### *Tofu*

1 block extra-firm tofu,  
drained, pressed, sliced  
in ½” thick rectangles

1 tsp vegetable oil

### *Sesame ‘Chicken’ Sauce*

½ cup unsalted vegetable stock

¼ cup soy sauce

3 tbsp white sugar

2 tbsp mirin

¼ tsp garlic, minced

¼ tsp ginger, peeled, minced

2 tsp sesame oil

1 tbsp sambal  
chili paste (optional)

1 tbsp cornstarch

¼ cup water

### *Toppings*

1 tsp toasted white sesame  
seeds

1 scallion, sliced

## *Directions:* (Temperature: 350°F Time: 20 minutes)

Toss tofu with vegetable oil. Separate tofu into 3-4 batches and place into the Air Fryer one batch at a time, in one even layer. Air fry for 20 minutes at 350°F, turning once halfway.

In a small sauté pan; combine the chicken stock, soy sauce, white sugar, mirin, garlic, ginger, sesame oil, and sambal over low heat. Whisk together cornstarch with water.

Once stock mixture is simmering, add the cornstarch slurry and whisk to combine, for about 1-2 minutes.

Remove from heat and toss the tofu in the sesame sauce. Top with white sesame seeds and scallion.



# CAULIFLOWER BUFFALO BITES

## *Ingredients:*

### *Buffalo Sauce*

1 tbsp unsalted butter

1/3 cup hot sauce

1 tsp honey

garlic powder to taste

### *Cauliflower*

4 cups cauliflower florets, sliced into 1/4 inch pieces

1 tbsp vegetable oil

## *Directions:* (Temperature: 400°F Time: 15 minutes)

Toss cauliflower with oil. Place cauliflower florets into Air Fryer in 2 batches. Fry at 400°F for 15 minutes, shaking once or twice throughout the cycle.

Melt butter in a small saucepan over medium-low heat (do not let it bubble). Add hot sauce, honey, and garlic powder to the butter and whisk to combine.

Toss the cauliflower florets with the hot sauce mixture and drain any extra sauce. Serve immediately.





# FRIED PLANTAINS

## *Ingredients:*

2 cups plantains, peeled, sliced (¼" thick, approximately 2 plantains)

2 tsp vegetable oil (or 4 sprays of nonstick spray)

¼ tsp kosher salt

*Directions:* (Temperature: 400°F Time: 15 minutes)

Toss plantain slices in a large bowl with oil and salt. Place 1 cup in Air Fryer, moving pieces apart that are sticking together. Air fry for 15 minutes, remove and shake. Then fry at 400°F for 15 minutes until well-browned. Remove all plantains and repeat with second cup. Serve with salsa verde and hot sauce, if desired.

## **Pro Tip:**

Choose plantains that are almost all black - these are perfectly ripe and will cook up to be wonderfully crunchy!



# HASSELBACK POTATO

## *Ingredients:*

- 1 russet potato
- 1 tsp kosher salt
- 1 tsp olive oil
- 1 tsp chives, minced

## *Directions:* (Temperature: 400°F Time: 50-60 minutes)

Place potato on its side lengthwise. Pierce russet potato with a metal skewer along its entire length to serve as the stop guard for slicing.

Carefully slice potato into tiny thin slices without piercing through the bottom of the potato. Remove metal skewer.

Sprinkle potato with kosher salt and olive oil. Place potato in Air Fryer and fry 50-60 minutes until cooked through and tops are crispy.

Garnish with chives.



# ONION RINGS

## *Ingredients:*

1 vidalia onion, peeled, ends cut off, sliced into  $\frac{3}{4}$ " rings  
1 cup all-purpose flour  
1 egg, beaten  
1 cup panko breadcrumbs  
 $\frac{1}{2}$  tsp kosher salt

*Directions:* (Temperature: 400°F Time: 15 minutes)

Combine panko and salt. Dip onion rings in egg, then panko mixture to cover thoroughly.

Place into Air Fryer 4-6 at a time, overlapping rings as little as possible. Fry for 15 minutes.

Serve with ketchup and mustard, if desired.



# EASY CRISPY BACON

## *Ingredients:*

4 strips uncured bacon (not thick-cut)

*Directions:* (Temperature: 400°F Time: 5 minutes)

Place 4 strips of bacon in Air Fryer, letting the sides of the bacon slide up the walls and ensuring bacon does not overlap. Fry at 370°F for 10 minutes. Remove and use paper towels to remove some of the grease on top of the bacon. Place back into Air Fryer and fry at 400°F for 5 minutes. Drain on paper towels and serve.

## **Pro Tip:**

You can adjust the length of the last few minutes at 400°F depending on how crispy you like your bacon!



# LEMON SHISHITO PEPPERS

## *Ingredients:*

10-12 shishito peppers

2 tsp vegetable oil

1 tsp kosher salt

½ lemon, cut into wedges (optional)

*Directions:* (Temperature: 400°F Time: 25 minutes)

Place shishitos into Air Fryer and toss with salt and vegetable oil.

Fry for 15 minutes. Squeeze fresh lemon onto shishitos and shake. Serve immediately.

 


# CUSTOMER SUPPORT

## FEEL GOOD GUARANTEE™

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit [bydash.com/feelgood](http://bydash.com/feelgood).

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or [support@bydash.com](mailto:support@bydash.com)

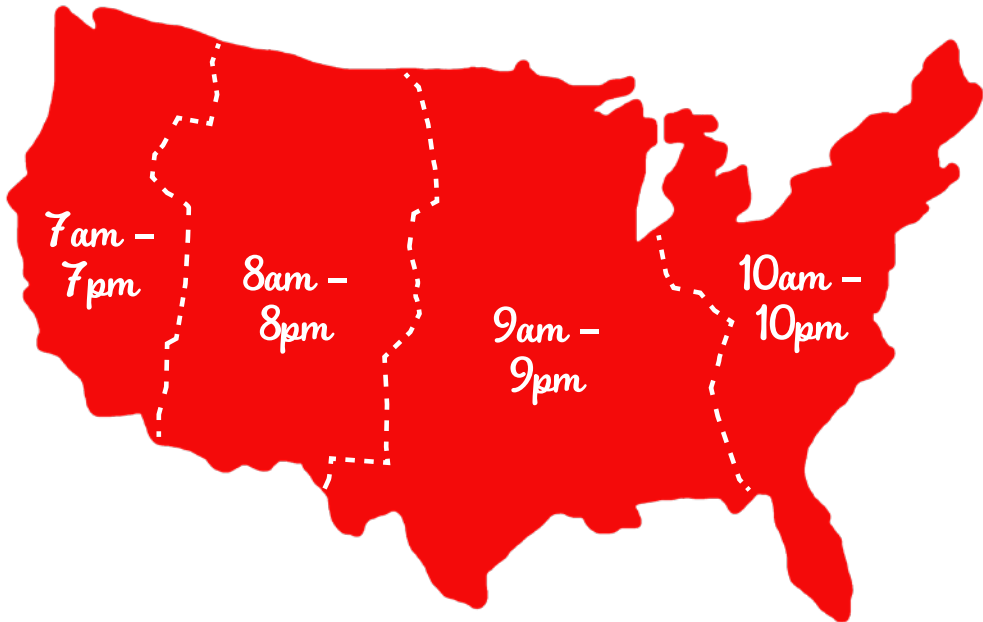

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM**.  
And also, **Alaska**, feel free to reach out from **6AM - 6PM**.

## STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [support@bydash.com](mailto:support@bydash.com).

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

## REPAIRS

DANGER! Risk of electric shock! The Dash Compact Air Fryer is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

## TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz

Power Rating 1000W

Stock#: DCAF150\_20180321\_v10

Made in China



1-800-898-6970 | @unprocessyourfood | bydash.com



*recipes  
inside!*



#DMW001

# MINI WAFFLE MAKER

Instruction Manual | Recipe Guide





# MINI WAFFLE MAKER

- Important Safeguards..... 4-9
- Parts & Features..... 10
- Using Your Mini Waffle Maker ..... 11-14
- Cleaning & Maintenance ..... 15
- Troubleshooting..... 16-17
- Recipes..... 19-29
- Customer Support ..... 30
- Warranty..... 31

*the dash team!*

# IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle.
- DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Mini Waffle Maker is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Waffle Maker and its nonstick Cooking Surface.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- DO NOT use the Mini Waffle Maker near water or other liquids, with wet hands, or while standing on a wet surface.

- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9 AM - 9PM EST Monday - Friday or by email at support@bydash.com.
- Do not use metal utensils on the Cooking Surface as this will damage the nonstick surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Be cautious when moving an appliance containing hot oils or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Allow Mini Waffle Maker to cool completely before moving, cleaning, or storing.
- Close supervision is necessary when any appliance is used by or near children.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Mini Waffle Maker can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

**IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.**

# GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

L'utilisation d'appareils électriques nécessite de prendre des mesures de sécurité de base, y compris:

- Lisez toutes les instructions.
- Retirez tout sac ou emballage de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Assurez-vous que l'appareil est minutieusement nettoyé avant utilisation.
- N'utilisez pas l'appareil en dehors de son utilisation prévue. Pour usage ménager uniquement. Ne l'utilisez pas à l'extérieur.
- **AVERTISSEMENT:** Surfaces chaudes ! Ne touchez jamais la surface de cuisson ou le couvercle pendant l'utilisation de l'appareil. Soulevez et baissez toujours le couvercle à l'aide de sa poignée.
- NE soulevez PAS le couvercle pour que votre bras se trouve au-dessus de la surface de cuisson brûlante, car cela pourrait entraîner des blessures. Soulevez par le côté.
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. Le mini gaufrier n'est PAS lavable en machine.
- N'utilisez jamais des produits d'entretien abrasifs pour nettoyer l'appareil, car cela pourrait endommager le mini gaufrier et sa surface de cuisson anti-adhérente.
- N'utilisez pas cet appareil avec un cordon ou une prise endommagé(e), ou si l'appareil est défaillant, s'il est tombé ou endommagé de quelque façon. Pour toute inspection, réparation ou ajustement, ramenez

- l'appareil au détaillant agréé le plus proche.
- N'utilisez PAS le mini gaufrier à proximité de l'eau ou d'autres liquides, avec des mains mouillées, ou si vous vous tenez sur une surface mouillée.
- Pour toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 9h à 21h HNE, du lundi au vendredi, ou par courriel à support@bydash.com.
- N'utilisez pas d'ustensiles en métal sur la surface de cuisson car cela endommagerait la surface anti-adhérente.
- Cet appareil n'est pas prévu pour être utilisé par des personnes (enfants compris) ayant des capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience et de connaissances, à moins qu'elles ne soient supervisées et instruites sur l'utilisation de cet appareil par une personne responsable de leur sécurité.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique, ou d'un four chaud.
- Faites attention lorsque vous déplacez un appareil contenant des huiles chaudes ou d'autres liquides chauds.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car ils pourraient entraîner un feu, une électrocution ou un dommage corporel.
- Laissez le mini gaufrier refroidir complètement avant tout déplacement, nettoyage ou entreposage.
- Une attention particulière doit être apportée quand l'appareil est utilisé par ou à proximité d'enfants.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre au niveau des bords de tables ou de comptoirs.
- Assurez-vous toujours de débrancher l'appareil de la prise électrique avant tout déplacement, nettoyage ou entreposage.
- StoreBound n'est nullement responsable des dommages causés par une mauvaise utilisation de l'appareil.

- Une mauvaise utilisation du mini gaufrier peut entraîner des dommages matériels ou même des dommages corporels.
- Cet appareil a une fiche polarisée (un des brins est plus large que l'autre). Afin de réduire le risque d'électrocution, cette fiche ne s'insère dans la prise électrique que d'une façon. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'insère toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Un cordon d'alimentation court doit être fourni afin d'éviter le risque d'emmêlement ou de trébuchement lié aux cordons plus longs. Une rallonge peut être utilisée à condition de faire attention. Si une rallonge est utilisée, la puissance électrique

indiquée sur la rallonge doit être au moins aussi grande que celle de l'appareil. Si l'appareil est connecté à la terre, la rallonge doit être un cordon tripolaire avec prise de terre. La rallonge doit être disposée de manière à ne pas reposer sur le comptoir ou sur la table où elle peut être tirée par un enfant ou source de trébuchement involontaire.

**GARANTIES IMPORTANTES:**  
VEUILLEZ LIRE ET CONSERVER CE  
MODE D'EMPLOI ET D'ENTRETIEN



Before first use, remove all packaging material and thoroughly clean your Mini Waffle Maker.



Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

## USING YOUR MINI WAFFLE MAKER



- 1** Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light (photo A) will illuminate, signaling that the Mini Waffle Maker is heating up.
- 2** Once the Cooking Surface reaches the optimal cooking temperature, the Indicator Light will automatically shut off. Now, you're ready to get cooking (photo B)!

## USING YOUR MINI WAFFLE MAKER



- 3** Carefully lift the Cover by the Cover Handle and spray both Cooking Surfaces with a small amount of non-aerosol cooking oil (photo C).
- 4** Place or pour batter onto the Cooking Surface (photo D) and close the Cover.

*Chef Tip!*



Aerosol cooking sprays often contain additives that can cause nonstick surfaces to become sticky and hard to clean over time. To ensure the longevity of your product, use a spray bottle and a neutral oil (vegetable, canola, etc.) to lubricate cooking surfaces.





- 5** Once waffle is cooked to your preference, carefully remove it from the Cooking Surface with a heat-resistant nylon, wood, or silicone cooking utensil (**photo E**).

**NOTE:** Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the nonstick surface.

- 6** When you have finished cooking, unplug your Mini Waffle Maker and allow it to cool before moving or cleaning (**photo F**).



Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Waffle Maker.

In order to keep your Mini Waffle Maker in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug Mini Waffle Maker and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry Mini Waffle Maker before storing.
- If there is food burned onto the Cooking Surface, pour on a little cooking oil and let sit for 5 to 10 minutes. Scrub the Cooking Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Waffle Maker and its nonstick Cooking Surface.

While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support Team at 1-800-898-6970 or support@bydash.com.

- 1. The light on the Mini Waffle Maker keeps shutting off.**
  - This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.
- 2. How do I know when the Mini Waffle Maker is heated and ready to use?**
  - When the Waffle Maker reaches the optimal temperature, the Indicator Light shuts off and that means you're ready to get cooking!
- 3. There is no On/Off Button. How do I turn the Mini Waffle Maker off and on?**
  - To turn on, simply plug in the power cord. When you're done cooking, turn off the Mini Waffle Maker by unplugging it.
- 4. When using my Mini Waffle Maker, the Cover gets very hot. Is this normal?**
  - Yes, this is completely normal. When using your Waffle Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.

- 5. After using my Mini Waffle Maker a few times, food is starting to stick to the surface. What is happening?**
  - There is probably a build-up of burnt food residue on the Cooking Surface. This is normal, especially when cooking with sugar. Allow the appliance to cool fully, pour on a little cooking oil and let sit for 5-10 minutes. Scrub Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Rinse the cloth and wipe again. If food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- 6. The Indicator Light will not turn on and the Cooking Surface is failing to heat.**
  - Ensure that the power cord is plugged into the power outlet.
  - Check to make sure the power outlet is operating correctly.
  - Determine if a power failure has occurred in your home, apartment or building.



# RECIPE GUIDE



*Follow us!*

**@bydash** | recipes, videos, & inspiration

**@unprocessyourfood** | veg & vegan-friendly meals



# CLASSIC WAFFLES

Yield: 8-10 waffles

## *Ingredients:*

- 1 cup flour
- 1 tbsp sugar
- 2 tsp baking powder
- ¼ tsp salt
- 1 egg
- 1 cup milk
- 2 tbsp melted butter or vegetable oil

## *Directions:*

1. In a medium bowl, sift the flour, sugar, baking powder, and salt. Whisk the egg, milk, and melted butter in a separate bowl. Add the wet ingredients to the dry and mix until just incorporated.
2. Grease the Mini Waffle Maker with butter or coat with a light coat of cooking spray. Pour ¼ cup of the batter into the Mini Waffle Maker and cook until golden brown. Repeat with the remaining batter.
3. Serve with a drizzle of maple syrup and fresh berries.





# PIZZA CHAFFLE

Yield: 8-10 waffles

## Ingredients:

1 large egg	½ cup shredded Parmesan cheese
½ cup riced cauliflower	4 tbsp pizza sauce
½ cup shredded mozzarella cheese	4 tbsp shredded mozzarella (for pizza topping)
½ tsp dried oregano	
⅛ tsp garlic powder	

## Directions:

1. In a mini food processor, pulse the egg, cauliflower, mozzarella, oregano, and garlic powder until the mixture is very finely chopped.
2. Spread 1 tbsp of the Parmesan cheese on the bottom of the Dash Mini Waffle Maker. Add half the cauliflower mixture, spreading it evenly. Sprinkle 1 tbsp more of the Parmesan cheese on top of the cauliflower mixture.
3. Cook the chaffle until well-browned and crisp, 6 mins. Set chaffle aside to cool. Repeat 3 more times making 4 chaffles.
4. Top each chaffle with 2 tbsp of the pizza sauce. Sprinkle on 1 tbsp mozzarella. Place the chaffles under the broiler until the cheese melts, 1-2 mins. Watch carefully so they don't burn and serve immediately.



# PALEO WAFFLES

Yield: 8-10 waffles

## Ingredients:

2 large eggs
½ banana, mashed
¾ tsp maple syrup
½ tsp vanilla extract
½ tsp baking powder
¼ cup almond flour
1 ½ tbsp coconut flour
Pinch of salt

## Directions:

1. Mix together eggs, banana, vanilla extract and maple syrup in a small bowl.
2. Whisk together dry ingredients in a separate bowl. Add the wet ingredients to the dry and mix until just incorporated.
3. Add 3.5 tbsp of batter to your Mini Waffle Maker and cook until golden brown on both sides.



# BANANA BREAD WAFFLES

Yield: 8-10 waffles

## Ingredients:

1 ½ cups all-purpose flour	¾ cup buttermilk
1 tsp baking powder	¼ cup light brown sugar
¼ tsp baking soda	2 large eggs
¼ tsp kosher salt	3 tbsp canola oil
1 cup mashed bananas (roughly 2 bananas)	

## Directions:

1. Whisk together flour, baking powder, baking soda and salt in a medium bowl.
2. Mash bananas with a fork or place in stand mixer with paddle attachment until no large chunks remain. Add buttermilk, brown sugar, eggs and oil. Whisk until well-combined. Add dry ingredients and mix until no clumps remain.
3. Add 3 tbsp of batter to your Mini Waffle Maker and cook until golden brown on both sides. Serve with additional bananas, honey and powdered sugar, if desired.





# CHOCOLATE TACOS WAFFLES

Yield: 8-10 waffles

## *Ingredients:*

2 tbsp cocoa powder  
½ cup all-purpose flour  
⅔ cup white sugar  
1 large egg

2 tbsp canola oil  
½ cup whole milk

## *Directions:*

1. Mix together cocoa powder, flour and sugar.
2. Whisk together egg, oil and milk until smooth. Add dry ingredients and mix until no clumps remain.
3. Add 3 tbsp of batter to your Mini Waffle Maker and cook until crispy on both sides.
4. Remove waffles and immediately drape over a rolling pin, or similarly sized cylindrical object, to form taco shape. Let waffles cool on rolling pin for 3 minutes, then place in freezer.
5. Serve with ice cream, sprinkles and a caramel drizzle.



## MORE RECIPE IDEAS

RECIPE IDEA	INGREDIENTS	COOKING TIME
<b>Protein Waffle</b>	Classic Waffle Recipe (pg 20) 1 scoop protein powder	4-6 min
<b>Cornbread Waffle</b>	¼ cup cornbread batter	6-8 min
<b>Mashed Potato Bite</b>	3 tbsp mashed potatoes	5 min
<b>S'more Biscuit</b>	1 refrigerated biscuit dough, sliced lengthwise 2 squares milk chocolate 5 mini marshmallows	5-7 min
<b>Grilled Cheese</b>	2 slices white or wheat bread, buttered 2 slices American Cheese	5 min
<b>Chocolate Chip Cookie</b>	2 tbsp cookie dough	5-7 min
<b>Waffle Omelette</b>	1 egg beaten 2 tbsp chopped veggies 1 tbsp grated Swiss cheese	5 min

OVER 80  
*Brilliant*  
**WAFFLE  
RECIPES**

for your Dash Mini Waffle Maker...



available now

 
*in our*  
**SWEET  
NEW  
COOKBOOK**

find more creative recipes at [bydash.com!](http://bydash.com!)

**FEEL GOOD GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit [bydash.com/feelgood](http://bydash.com/feelgood).

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or [support@bydash.com](mailto:support@bydash.com)

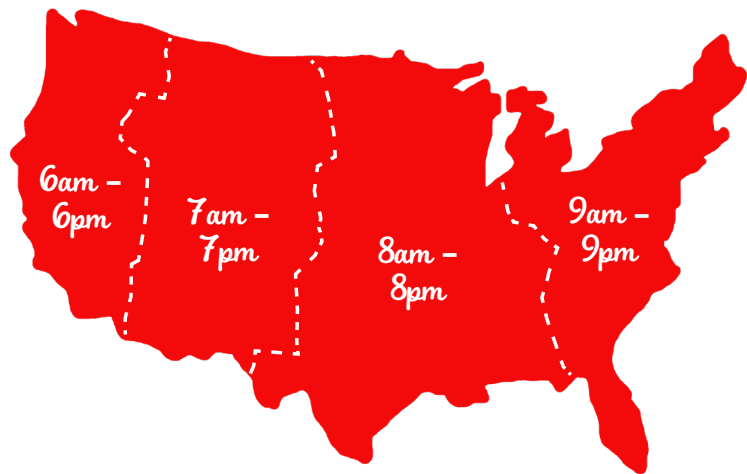

Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**. And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

**STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY**

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [support@bydash.com](mailto:support@bydash.com). There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

**REPAIRS**

**DANGER!** Risk of electric shock! The Dash Mini Waffle Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

**TECHNICAL SPECIFICATIONS**

Voltage 120V ~ 60Hz  
Power Rating 350W  
Stock#: DMW001\_20210422\_V14



1-800-898-6970 | @bydash | bydash.com